

マイクロSD・マイクロSDHC携帯電話対応表

au

メーカー	携帯機種名	マイクロSD		マイクロSDHC	
		1GB	2GB	4GB	8GB
SHARP	E06SH	○	○	×	×
	E05SH	○	○	×	×
	SH005	○	○	○	○
	SH004	○	○	×	×
	SH003	○	○	○	○
	SH002	○	○	×	×
	SH001	○	○	×	×
	Sportio water beat	○	○	×	×
	W64SH	○	○	×	×
	URBANO(W63SH)	○	○	×	×
	W62SH	○	○	×	×
	W61SH	○	○	×	×
	W52SH	○	○	×	×
	SONY	URBANO BARONE	○	○	○
BRAVIA Phone U1		○	○	○	○
G9		○	○	×	×
S002		○	○	×	×
S001		○	○	×	×
Premier3		○	○	×	×
W64S		○	○	×	×
re(W63S)		○	○	×	×
W62S		○	○	×	×
W61S		○	○	×	×
W54S		○	○	×	×
W52S		○	○	×	×
Panasonic	W62P	○	○	×	×
	W61P	○	○	×	×
	W52P	○	○	×	×
	W51P	○	○	×	×
	P001	○	○	×	×
東芝	PLY	○	○	○	○
	biblio	○	○	○	○
	T003	○	○	○	○
	T002	○	○	○	○
	T001	○	○	×	×
	W65T	○	○	×	×
	W64T	○	○	×	×
	Sportio(W63T)	○	○	×	×
	W62T	○	○	×	×
	W61T	○	○	×	×
	W56T	○	○	×	×
	W55T	○	○	×	×
	W54T	○	○	×	×
	W53T	○	○	×	×
	W52T	○	○	×	×
	W51T	○	○	×	×
	A5529T	○	○	×	×
	A5523T	○	○	×	×
	W47T	○	○	×	×
W45T	○	×	×	×	
日立	Mobile Hi-Vision CAM Wooo	○	○	○	○
	H001	○	○	×	×
	W63H	○	○	×	×
	W62H	○	○	×	×
	W61H	○	○	×	×
	W53H	○	○	×	×
	W52H	○	○	×	×
	W51H	○	○	×	×
	W43H II	○	○	×	×
	W43H	○	×	×	×
W42H	○	×	×	×	
カシオ	CA004	○	○	×	×
	CA003	○	○	○	○
	CA002	○	○	×	×
	CA001	○	○	×	×
	W63CA	○	○	×	×
	W62CA(G'zOne)	○	○	×	×
	W61CA	○	○	×	×
	W53CA	○	○	×	×
	W52CA	○	○	×	×
	W51CA	○	○	×	×
	W43CA	○	×	×	×
	W42CA	○	×	×	×
サンヨー	SA001	○	○	○	○
	W64SA	○	○	×	×
	W63SA	○	○	×	×
	W62SA	○	○	×	×
	W61SA	○	○	×	×
	INFOBAR2(W55SA)	○	○	×	×
	W54SA	○	○	×	×
	W53SA	○	○	×	×
	W52SA	○	○	×	×
	W51SA	○	○	×	×
	ジュニアケータイ(A5525SA)	○	×	×	×
	Sweetcute(A5524SA)	○	×	×	×
	W43SA	○	○	×	×
	W42SA	○	×	×	×
	A5527SA	○	○	×	×
	A5520SA	○	×	×	×
京セラ	PRISMOID	○	○	○	○
	misora	○	○	○	○
	K004	○	○	○	○
	K003	○	○	○	○
	K002	○	○	○	○
	K001	○	○	○	×
	NS02	○	○	×	×
	NS01	○	○	○	×
	W65K	○	○	○	×
	W64K	○	○	×	×
	W63K	○	○	×	×
	W62K	○	○	×	×
	W61K	○	○	×	×
	W53K	○	○	×	×
	MEDIASKIN(W52K)	○	○	×	×
	W51K	○	○	×	×
	W44KII	○	○	×	×
	W44K	○	×	×	×
	W43K	○	×	×	×
	A5521K	○	×	×	×
A5526K	○	○	×	×	
パンテック	W62PT	○	○	×	×
	W61PT	○	○	×	×
HTC	E30HT	○	○	○	○